


# AST NONSKID SYSTEM

## Recommended Ambient Air and Deck Temperatures

Ensure Deck is Free of Moisture and that the Surface Temp is at least 5° (F) above the Dew Point.

### AMBIENT AIR TEMPERATURE (F)

DECK  
TEMP  
(F)

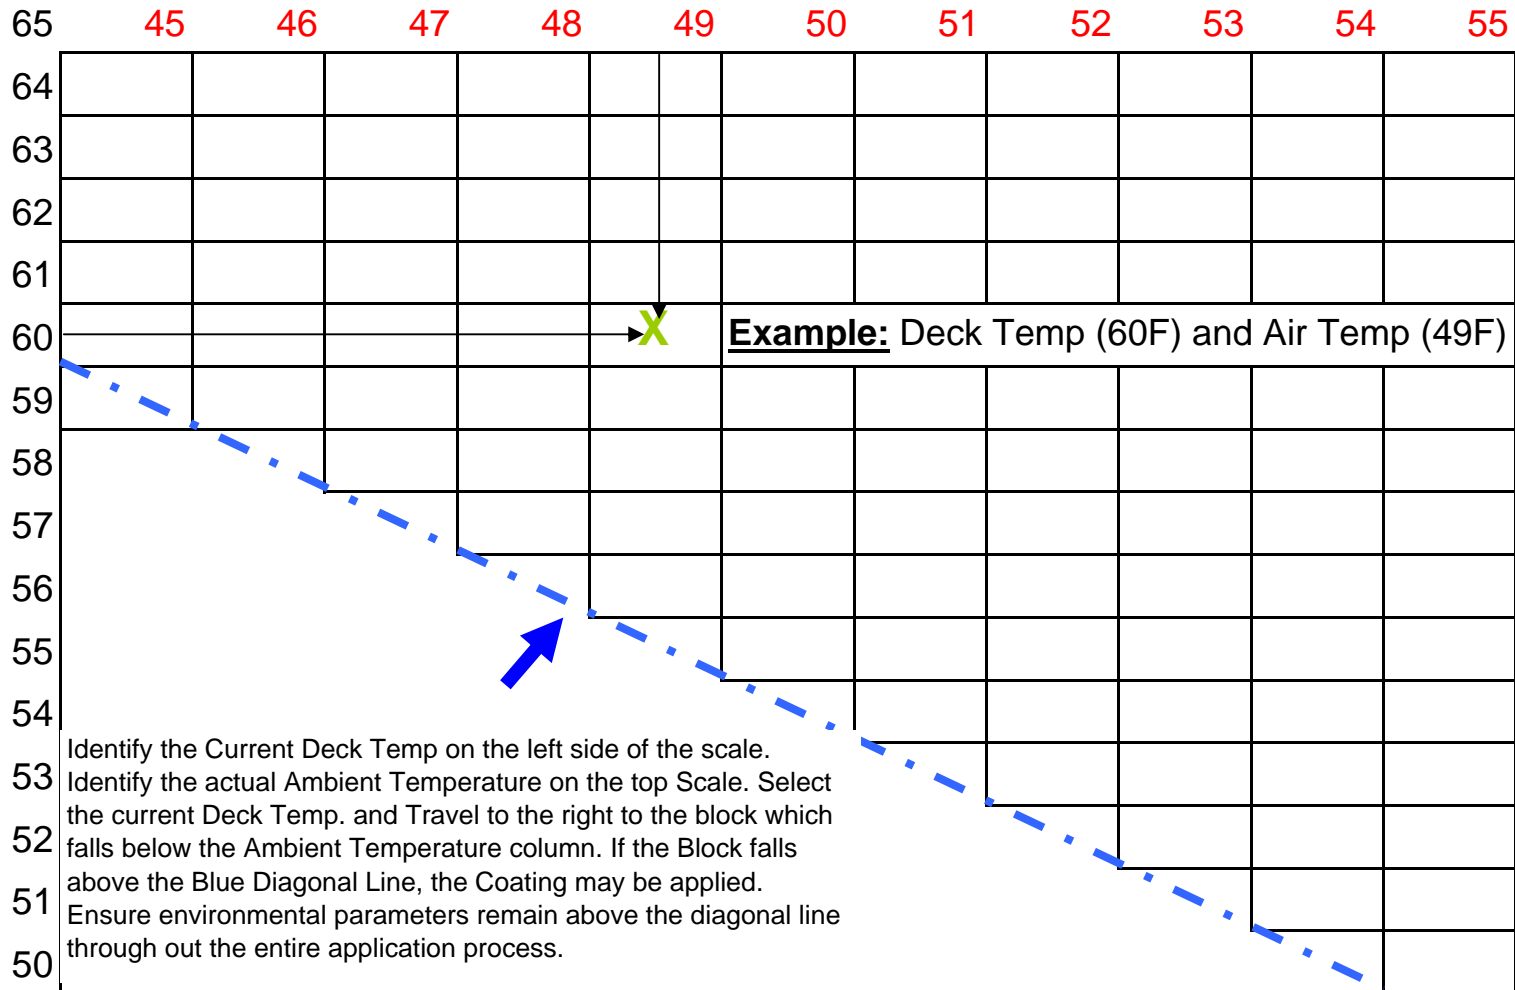

**USE this "GO no GO" Chart ONLY when Ambient Air Temperature is less than 55 Degrees Fahrenheit !!**

Application temperature information listed above is offered as a general guideline and does not supercede any specific requirements set forth in US

Navy documents such as Naval Ship's Technical Manual Chapter 634, 009-32 or other Navy specifications